




Model 2003

ADAPTER ADAPTADOR • ADAPTATEUR

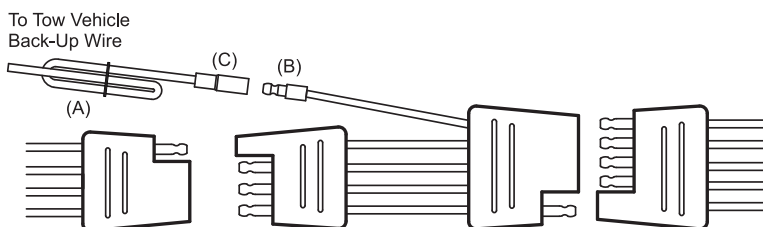

VEHICLE

VEHÍCULO
VÉHICULE

ADAPTER

ADAPTADOR
ADAPTATEUR

TRAILER

REMOLQUE
CARAVANE

Easy Installation

1. With a tester, locate the back-up wire on the back end of the tow vehicle.
2. Splice the blue wire (A) to back-up wire of the tow vehicle using the given connector (B).
3. Connect the male bullet terminal located off the adapter (C) into the female bullet connector on the blue wire (D).
4. Connect the car end 4 flat wire and the trailer end 5 flat wire into the adapter.

Instalación Fácil

1. Con un probador, sitúe el alambre de reserva en el fin de atrás del vehículo de remolque.
2. Empalme el alambre azul (A) al alambre de reserva del vehículo de remolque que utiliza el conector dado (B).
3. Conecte la terminal masculina de bala situada del adaptador (C) en el conector femenino de bala en el alambre azul (D).
4. Conecte el fin de coche que 4 alambre plano y el remolque terminan 5 alambre plano en el adaptador.

Installation Facile

1. Avec un testeur, localiser le fil de renfort sur la fin arrière du véhicule de remorque.
2. Episser le fil bleu (A) au fil de renfort du véhicule de remorque utilisant le connecteur donné (B).
3. Connecter le terminal mâle de balle localisé de l'adaptateur (C) dans le connecteur de balle femelle sur le fil bleu (D).
4. Connecter la fin de voiture 4 fil plat et la caravane terminent 5 fil plat dans l'adaptateur.